

Video Splitter Module

Installation: (see Fig. 1)

This Video Splitter Module is used to route the CATV or antenna signal to multiple locations. The Video Amplifier Module may be required to boost the RF signal for longer cable distance. To install the module, simply insert tabs to the cap located on the rail of the enclosure. Press the fastener to lock the module at the desired position.

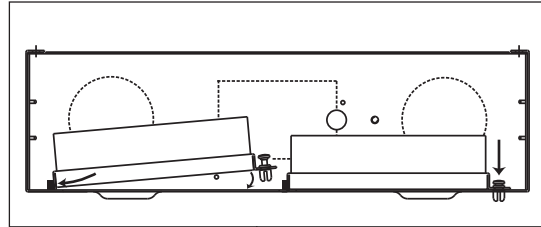


Fig.1

Operation: (see Fig. 2)

The male F-connector which is compatible with RG-59 or RG-6 is used for each video coaxial cable. A video source is connected to the "IN" port located in the center of the splitter. OUTPUT ports can route the input RF signal to up to eight locations. Recommend: other unused output ports should be capped with 75ohm terminator.

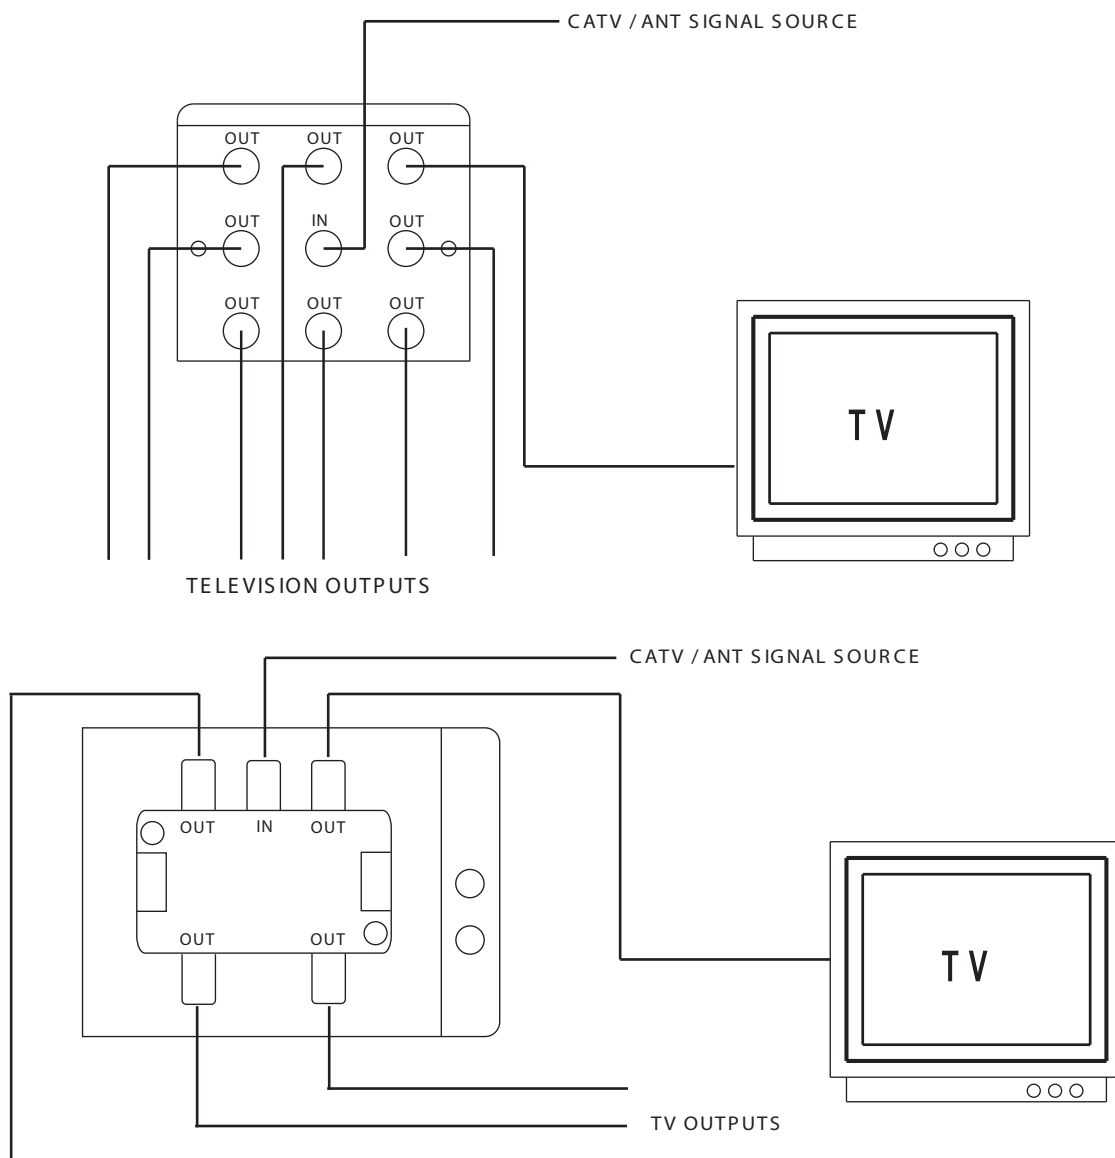


Fig.2