



Cat.6 Plug Assembly Instructions


Step: 1



*cable stripped approximately 3cm.

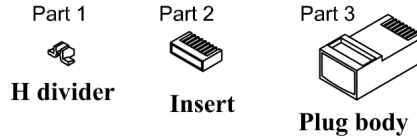


Step: 2

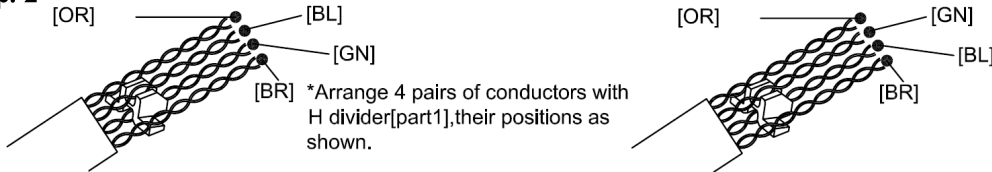


*Caution: the positions of the BL and GN pairs are opposite in two ends.

Step: 3

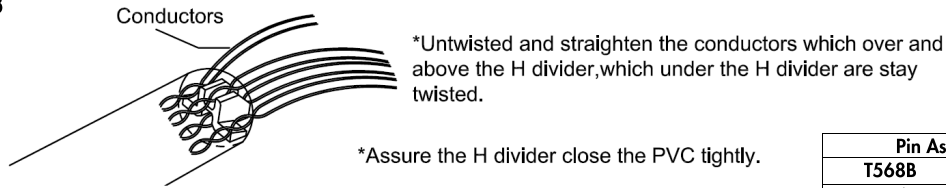

| Pin Assignment | |
|----------------|-----------|
| T568B | T568A |
| 1 - WH/OR | 1 - WH/GN |
| 2 - OR | 2 - GN |
| 3 - WH/GN | 3 - WH/OR |
| 4 - BL | 4 - BL |
| 5 - WHT/BL | 5 - WH/BL |
| 6 - GN | 6 - OR |
| 7 - WH/BR | 7 - WH/BR |
| 8 - BR | 8 - BR |

Step: 4



*Ensure that the conductors are cut as short as possible to keep the integrity of the twisted pairs before inserting them into the load bar and connector.