



## Settings Tab

Click on the “Settings” tab to (a) change the login password, by entering the old password, new password, and reconfirming the new password, and clicking on “Apply”, (b) upgrade the device firmware, by clicking on the “Choose File” button to search for and select the new firmware, and then clicking “Upload”, (c) reset the unit to factory defaults, by clicking on the “Reset” button, and (d) reboot the unit, by clicking on the “Reboot” button.

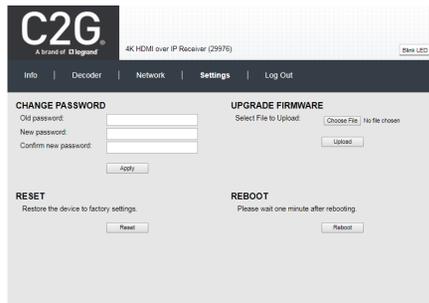

## Log Out Tab

Click on the “Log Out” tab to log out of the device web interface.

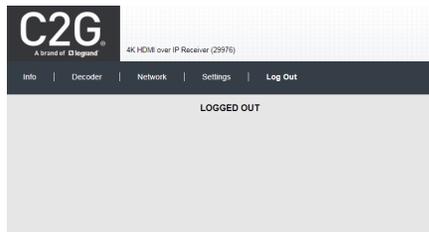

HDMI® over IP Transmitter - 4K 30Hz (29975)  
HDMI over IP Receiver - 4K 60Hz (29976)

## Web Interface Guide

### Overview

The 29975 HDMI over IP Transmitter - 4K 30Hz and 29976 HDMI over IP Receiver - 4K 60Hz may both be managed by their respective web interfaces, and by the 29977 Network Controller for 4K HDMI over IP. This document covers how to setup and manage the 29975 and 29976 via the device's web interface. To manage these devices via the 29977 Network Controller for 4K HDMI over IP, reference the Network Controller Operation Manual.


Access to the device web interface is possible via a web browser. The unit comes by default with DHCP enabled. To identify the IP address of the 29975 and 29976 devices, can be managed by using network utility software tools such as Bonjour, or similar. Set your PC to a different IP address in the same segment and set the PC subnet mask and gateway address accordingly. Contact a network administrator if assistance is required on how to accomplish this. Enter the 29975 and 29976 device IP address in your browser and press Enter. The first screen presented is the Login screen. Note that several 29975 and 29976 screens allow the user to click on a “Blink LED” button to cause the device “Link” LED to blink for testing and tracing purposes.

### 1) HDMI over IP Transmitter - 4K 30Hz (29975)

There are several screens to navigate in order to manage the 29975 Transmitter. The first screen shown after entering the device IP address in the browser is the login screen.


### Login

To login to the 29975 web interface, type in the Username and Password, and then click on “Login”. The default Username and Password are “admin”.

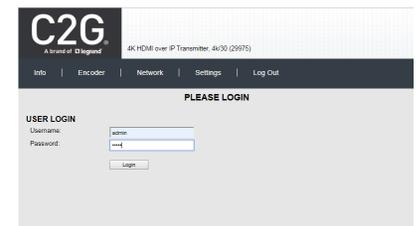


### Info Tab

Click on the “Info” tab to get information on the 29975, such as the (a) CPU usage, (b) memory usage vs total memory, (c) input video resolution, (d) input FPS - frames per second, (e) security check (f) GOP - Group of Pictures, (g) encoding type, (h) output video resolution, (i) output frames per second, (j) output bitrate, and (k) URL addresses for the supported communication protocols, including TS, HLS, FLV, RTMP, RTSP, and Multicast.

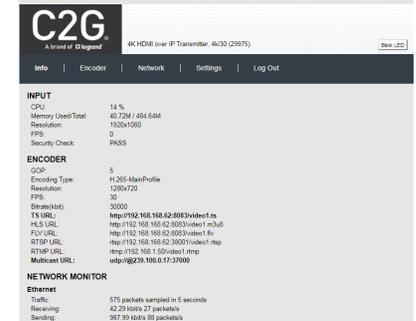

### Encoder Tab

Click on the “Encoder” tab to (a) set the encoding type via a pulldown tab (to baseline, main or high profile for H.264, or main profile for H.265), (b) set output video resolution via pulldown tab (to “Same as Input”, or from 176x144 to 3840x2160), (c) set the bitrate (from 32Kbps to 40Mbps), (d) set the FPS - frames per second (from 5 to 60fps), (e) set the GOP –

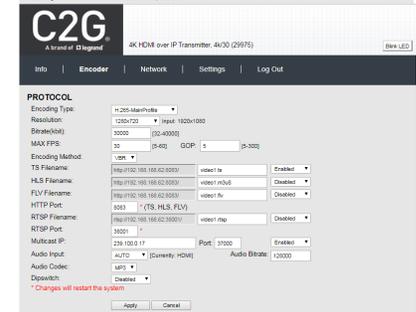

6500 Poe Avenue  
Dayton, OH 45414  
Phone 800.293.4970  
www.c2g.com

Group of Pictures (from 5 to 300), (f) set the encoding method (VBR – variable, or CBR - continuous bitrate), (g) set the URL addresses for the supported communication protocols, including TS, HLS, FLV (along with HTTP Port# setting and Push or Pull mode selection via pulldown tab), RTSP (along with Port# setting and Push or Pull mode selection via pulldown tab), and Multicast IP (along with Port# selection), (h) enable or disable each of these communication protocols from a pulldown tab, **Note:** Only a limited selections should be made at a time. Do not enable all at the same time. (i) set the embedded audio input source (to HDMI, or Analog via 3.5mm jack) (j) set the audio bitrate (from 48Kbps to 320Kbps) (k) set the audio codec (to AAC, or MP3), (l) set the audio frequency (to 44100Hz, or 48000Hz), and (m) enable or disable the Dip Switches via a pulldown tab. Click on the “Apply” button to accept changes, or on “Reset” to return to the previous settings.

### Network Tab


Click on the Network tab to (a) enable or disable DHCP via a pulldown tab, (b) set the device Static IP Address, Subnet Mask and Gateway, and (c) to get the unit MAC address.

Click on the “Apply” button to accept changes, or “Reset” to return to the previous settings.




### Settings Tab

Click on the “Settings” tab to (a) change the login password, by entering the old password, new password, and reconfirming the new password, and clicking on “Apply”, (b) upgrade the device firmware, by clicking on the “Choose File” button to search for and select the new firmware, and then clicking “Upload”, (c) reset the unit to factory defaults, by clicking on the “Reset” button, and (d) reboot the unit, by clicking on the “Reboot” button.

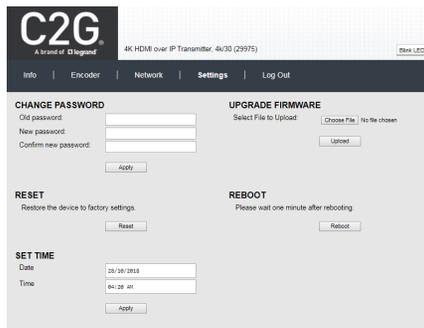

### Log Out Tab

Click on the “Log Out” tab to log out of the device web interface.

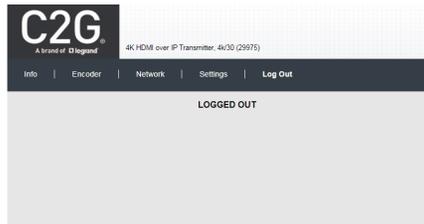


## 2) HDMI over IP Receiver - 4K 60Hz (29976)

There are several screens to navigate in order to manage the 29976 Receiver. The first screen shown after entering the device IP address in the browser is the login screen.


### Login

To login to the 29976 web interface, type in the Username and Password, and then click on “Login”. The default Username and Password is “admin”.

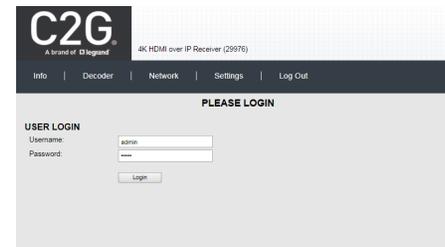


### Info Tab

Click on the “Info” tab to get information on the 29976, such as the output and input video resolution, and the URL addresses for the supported & configured communication protocols, including TS, HLS, FLV, RTSP, RTMP, and Multicast.

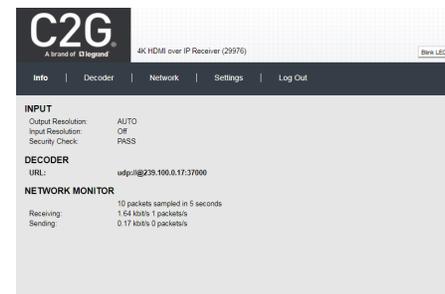

### Decoder Tab

Click on the “Decoder” tab to (a) set the output video resolution via a pulldown tab (to Auto, or from 480/60 to 3840x2160), (b) set the URL addresses for the supported communication protocols, including TS, HLS, FLV, RTSP, RTMP, and Multicast, (c) enable or disable each communication protocol from a pulldown tab, (d) set Deep Color, and (f) enable or disable the Dip Switches via a pulldown tab.

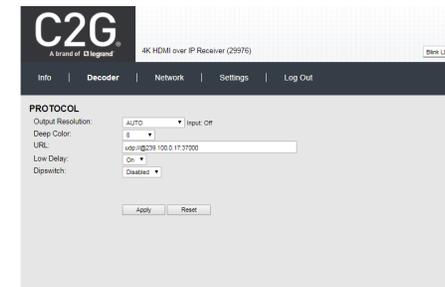

Click on the “Apply” button to accept changes, or on “Reset” to return to the previous settings.

### Network Tab

Click on the Network tab to (a) enable or disable DHCP via a pulldown tab, (b) set the device Static IP Address, Subnet Mask, Gateway, DNS 1 and DNS 2, and (c) to get the unit MAC address.

Click on the “Apply” button to accept changes, or “Reset” to return to the previous settings.

